

Smart Dimmer Series





....

00

(holder)

IRIS 2002, S.A. C/San Agustin, 17 28014 Madrid SPAIN T. +34 91 429 42 99 F.+34 91 369 05 93 www.irisled.com



Features and Benefits

SMART-DIM is little system for home lighting, it can dimmer constant current and constant

voltage LED light, and it can use as AC switch for other electrical household appliances or

light. Very flex and easy to use.

Technical parameters

●5%-100% brightness control, 32 levels;

- On/off function;
- can control max 5 different channels;
- each channel can have no-limited receptor
- Remote control. RF
- •Learn-in function, one receptor only can be controlled by one sender, one sender can controlled no limited receptor.
- Two kind of receptors, constant current and constant current. receptor.

Code20400002RF remote controller for Smart Dimmer
20400003,2040000420400003Smart Dimmer 12-32V DC input, two output, Max
5A/CH,
Smart Dimmer 12-36V DC input and output, Max
700mA/CH,

Warranty

1 year

Application

•Building Decoration: Business spaces, airports, subway.

•Indoor Decoration: Lighting and back lighting for hospital, hotel, marketplace, square,

dining-room, pub and etc..

• AD solid Word, sign and mark, signboard and billboard.

•Be used as big area back lighting source.

IRIS 2002,S.A. C/San Agustin, 17 28014 Madrid SPAIN T. +34 91 429 42 99 F.+34 91 369 05 93 www.irisled.com








Radio frequency

Size

Weight

Receptor	(CONSTRANT	VOLTAGE)
1100000101		

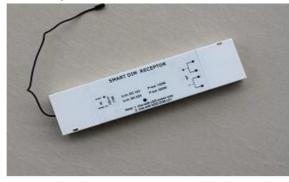

_

433MHZ

mm

60g

135 (L)X41(W)X19(H)

 DC V_in
 12/32V

 V_out
 5A(Max) per channel, 12V: 120W; 24V:

 Size
 178 (L)X45(W)X20(H)


 Weight
 100g
 Receptor (CONSTRANT CURRENT)



DC V_ in	12/36V	
I_out	Max voltage=input voltage,	
	current 700Ma/channel	
Size	178 (L)X45(W)X20(H) mm	
Weight	100g	



operation & installation Instruction

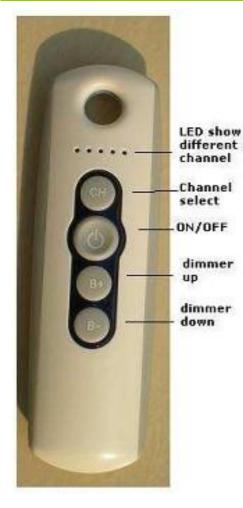

Operation Instruction

- ●CH:press to select the channel
- •ON/OFF: press to ON or OFF one channel
- •+: Brightness plus (only to constant voltage and costant current)
- •-: brightenss Minous (only to constant voltage and costant current)

motunation motion


●1.connect the receptor as Wiring instruction

- ●2. select the Channel in SENDER,(press the CH, the LED will show the channel selected).
- ●3. press the botton in receptor. The Red indicater LED will flash.
- •4.Press the B+ in Sender, the Receptor Red indicater LED will stop flash. LEARN IN finish.
- •5. can repeater above process to learn different Channel: each channel can learn in unlimited receptor.

IRIS 2002,S.A. C/San Agustin, 17 28014 Madrid SPAIN T. +34 91 429 42 99 F.+34 91 369 05 93 www.irisled.com



Connection Diagram

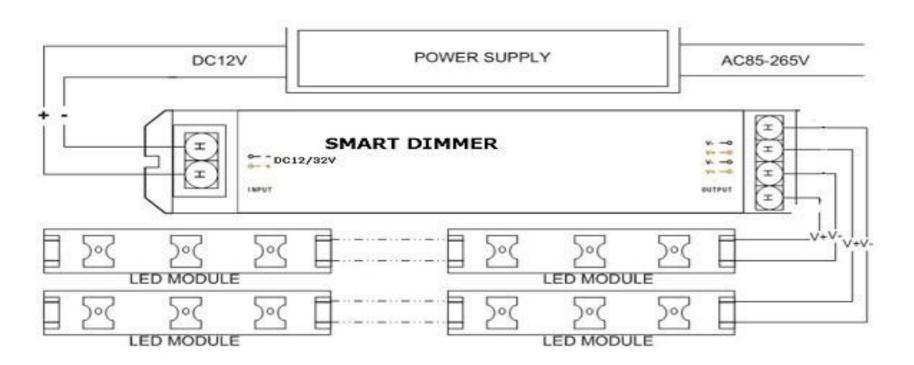

IRIS 2002,S.A. C/San Agustin, 17 28014 Madrid SPAIN T. +34 91 429 42 99 F.+34 91 369 05 93 www.irisled.com